

## FD – Lenses

FD lenses can be identified by the chrome ring. Place the lens on the camera mount and turn the chrome ring clockwise. This attaches the lens to the camera.



## nFD – Lenses / new FD - Lenses

With the introduction of the new nFD bayonet, the chrome ring has been eliminated and the lens is rotated clockwise as a whole after it is attached to the camera, locking it in place.

